

Forza Componenti

Lotus Exige Install Tips


Important Note:

Installation tips generated from personal feedback from customers. Results are not guaranteed and are provided as a suggestion only.





Accessing the Vacuum Solenoid Valves


The vacuum solenoid valve is located in the rear of the car. The following illustration shows the relative location of the vacuum solenoid valve to the exhaust silencer.

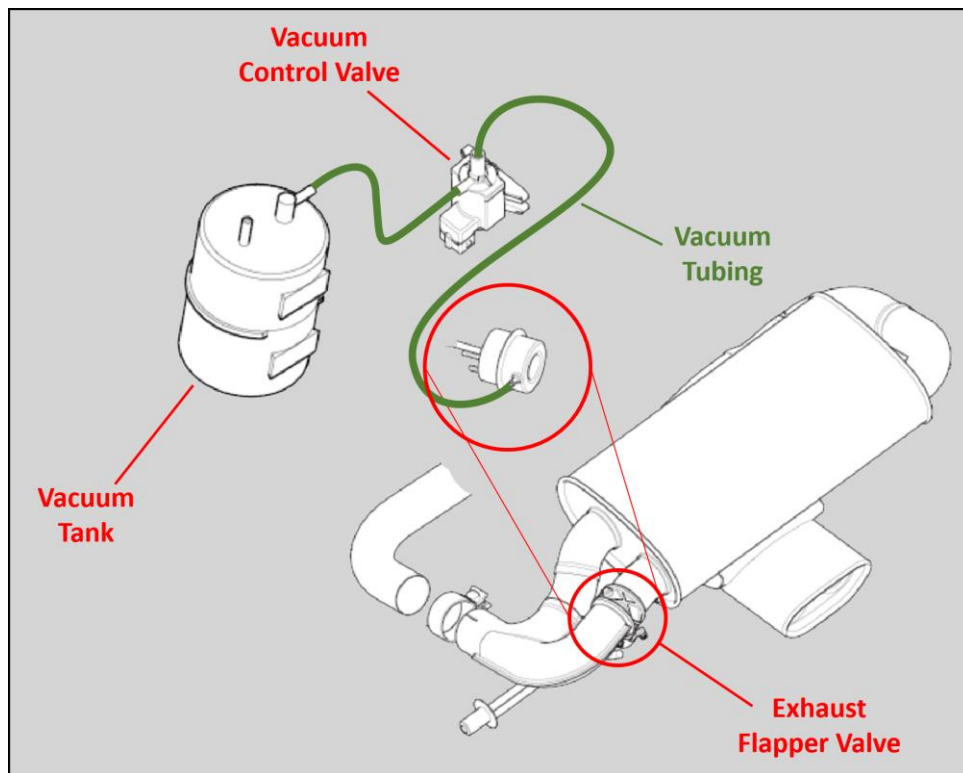

Remove the engine bay panel by removing the seven screws indicated below.

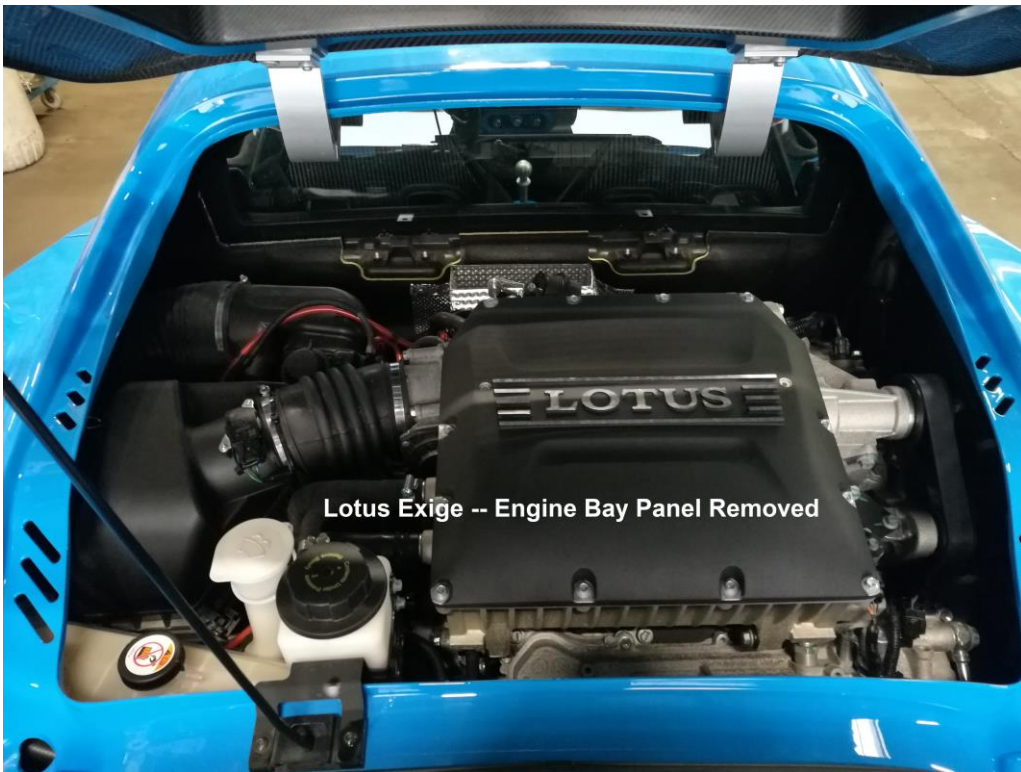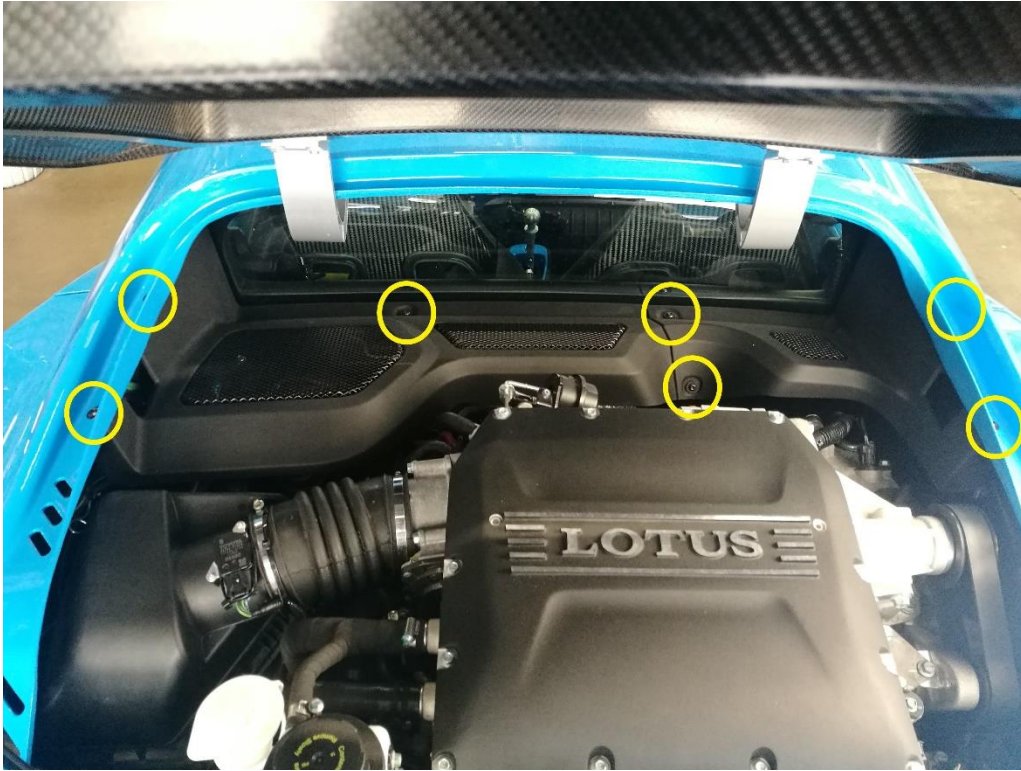

Once the engine bay panel is removed, locate the vacuum solenoid valve indicated in the following photo.

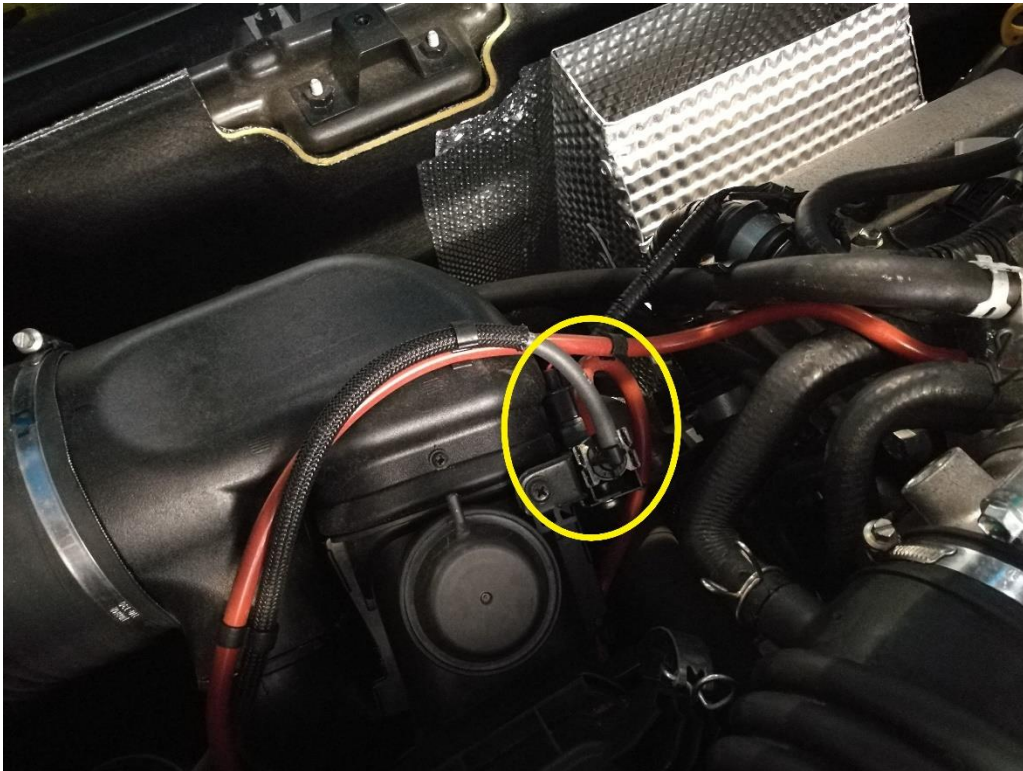


Position the Forza controller in a suitable location.


The photo below illustrates using the flat panel on the left side of the engine bay. Use the included 3M Dual Lock strips to secure the controller module. You may also wish to use cable ties for extra security.



Once you have established the location for the controller:

- Disconnect the cable that attaches to the vacuum solenoid valve.
- Plug in the adapter to the connector on that cable.
- Plug in the adapter to the solenoid valve.
- Connect the two adapters to the Forza wiring harness.
- Connect the Forza wiring harness to the Forza Controller.

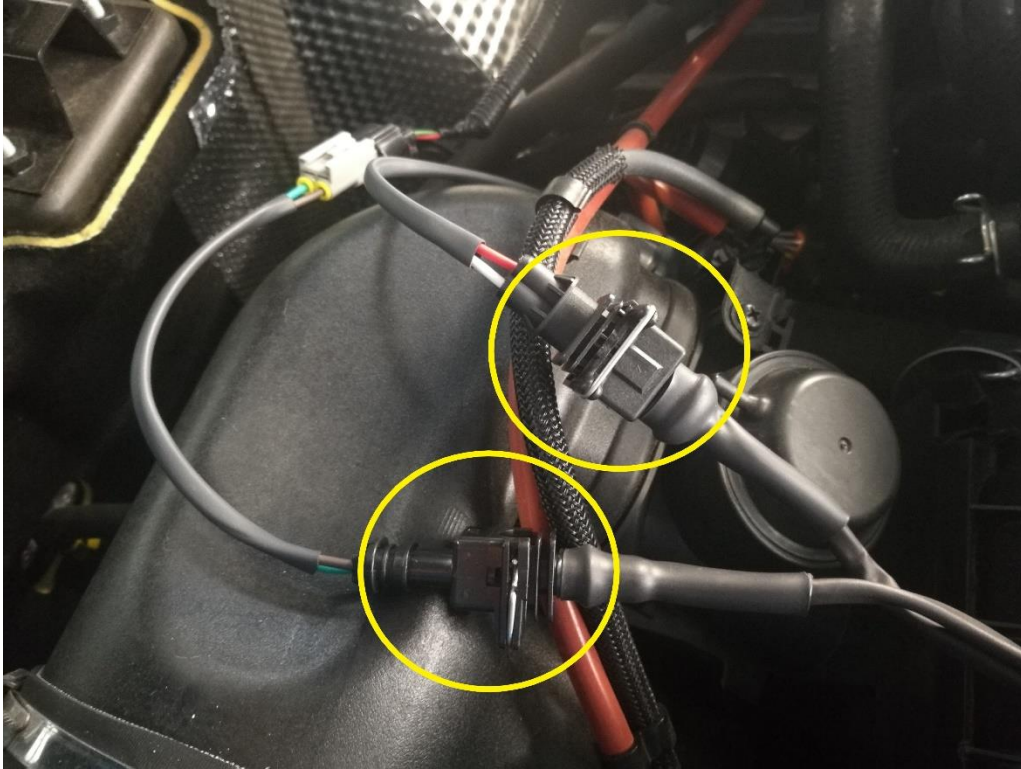

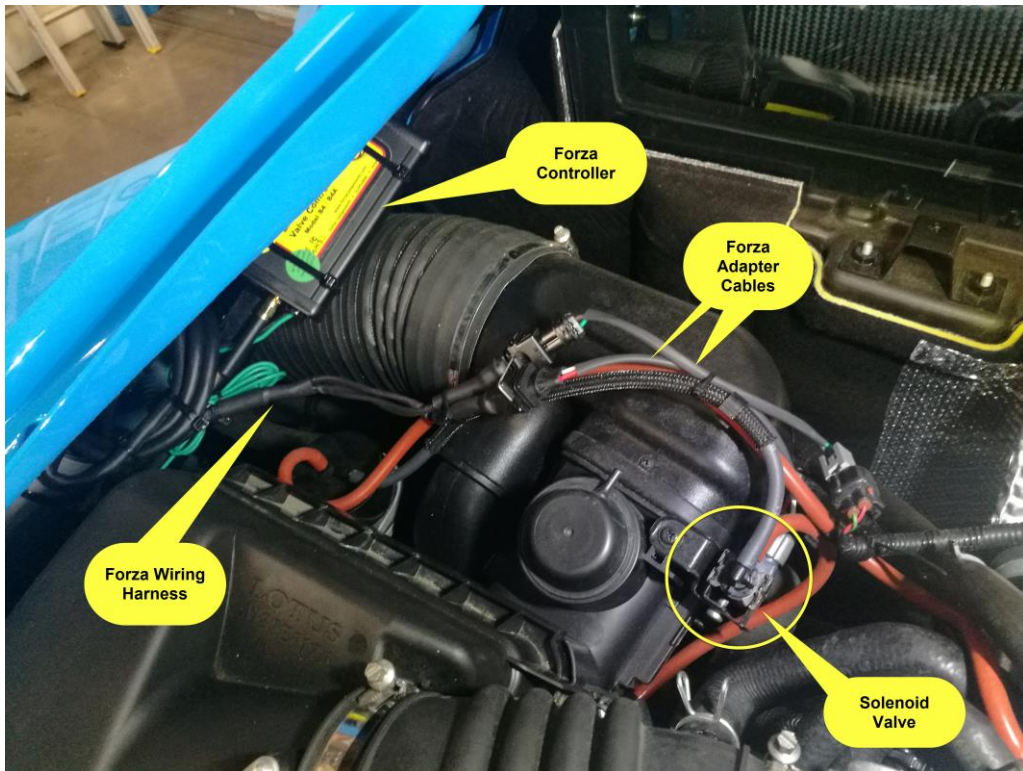

Locate a suitable ground point for the green grounding wire on the Forza controller. One such point is the screw on the coolant tank.





Start the car and test the function of the controller. When you are assured that everything is functioning as it should, secure any loose wires with cable ties. Re-examine the installation is secure.



Reinstall the engine bay cover.